

SPECIAL TOOLS

Obtainable from:
V. L. CHURCHILL & CO. LTD.
Great South West Road
Bedfont
Feltham
Middlesex, England

Engine

| | |
|----------------|--|
| RG.10A-7 | Adaptor Set. Use with RG.10A Valve Guide Remover/Replacer. |
| RG.32-2 | Adaptor Set. Use with Camshaft Bush Remover/Replacer 32. |
| RG.89A | Timing Cover Centraliser. |
| RG.90A | Distributor Clamping Nut Wrench. |
| RG.155-1 | Adaptor |
| RG.155-4 | Adaptor (Crankshaft Pulley, using Parts of RG.155-1). |
| RG.172A | Piston ring compressor. (79mm. bore engine) |
| RG.186 | Sump Drain Plug Socket (For $\frac{1}{2}$ " drive). |
| RG.209 | Camshaft wheel remover |
| RG.225 | Cylinder Head Nut Crowfoot Wrench (For $\frac{1}{2}$ " drive extension). |
| RG.290 | Starter dog wrench. |
| RG.336-1 | Adaptor. Use with Con. Rod Jig 335 & Master Arbor 336. (79mm. bore engine) |
| RG.7600-2 | Adaptor Collets (2). Use with Flywheel Spigot Bearing Remover 7600. |
| RG.306 ... | Piston ring compressor (81.5mm. bore engine). |
| RG.336-3 ... | Adaptor. Use with Con. Rod Jig 335 & Master Arbor 336 (81.5 mm. bore engine). |
| | Ring gauges for checking bore measuring gauge are obtainable from Coventry Gauge and Tool Co. Ltd. Coventry. (3.21"—1592c.c. engine, 3.11"—1494cc. engine) |

} Use with small
adjustable two-
legged Puller 155.

Clutch, Gearbox and overdrive

| | |
|-------------|--|
| RG.41 | Clutch Plate Centraliser. |
| RG.62 | Selector Shaft Loading Adaptor. |
| RG.200 | Group of Overdrive tools. |
| L.212 | Rear Cover Oil Seal Replacer—Adaptor. (Use with No. 550 Handle). |
| 7065C | Circlip Pliers (Type C points). |

Rear Axle

| | |
|---------------|---|
| RG.16A-4 | Axle shaft remover adaptor. Used with main tool RG.16A. |
| RG.16A-5 | Axle shaft remover adaptors (4 legs). Used with main tool RG.16A. (centre lock hubs). |
| RG.48 | Bevel pinion flange holding wrench. |
| RG.188A-1 ... | Rear hub bearing remover plate and bush. Used with 4 legs RG.16A-5 and RG.188A. |
| RG.188A | Rear hub remover and securing plate. Used with 4 legs RG.16A-5 for centre lock hubs. |

| | | |
|--------------|------|---|
| RG.188A-2 | ... | Rear hub thrust block and bolts (centre lock hubs). |
| RG.292 | | Differential bearing replacer. Use with 550 handle. |
| RG.1105-1 | | Bevel pinion bearing outer race remover/replacer. Used with RG.1105. |
| RG.295A | | Differential assembly jig. |
| RG.4221 B-20 | | Differential bearing remover adaptor. Used with RG.4221B. |
| RG.4221B-21 | | Bevel pinion bearing inner race remover/replacer. used with RG.4221B. |
| RG.300 | ... | Bevel pinion bearing pre-load gauge. |
| RG.300-1 | ... | Bevel pinion bearing pre-load gauge adaptor. |

Steering and Suspension

| | | |
|-----------|------|---|
| RG.50D-2 | | Adaptor for coil spring compressor. (Use with RG.50D main tool). |
| RG.187 | | Steering idler lever bush remover and replacer adaptor. (Use with shackle pin bush remover/replacer RG.3034). |
| RG.191A | | Upper ball joint remover. |
| RG.192 | | Stub axle swivel pin replacer. |
| RG.193 | | Stub axle swivel pin remover. |
| RG.194 | | Swivel pin bush remover, replacer and broaching equipment. |
| RG.196A-1 | | Fulcrum pin brush remover/replacer—adaptor. (Use with RG.196A main tool). |
| RG.198A | ... | Drop arm remover. |

General Equipment

| | | |
|---------|------|---|
| No. 1 | | Tension wrench 5-20 lb. ft. (·6-2·7 kg.m) [$\frac{3}{8}$ " sq. drive] |
| No. 2 | | Tension wrench 16-100 lb. ft. (2·2-13·8 kg.m.) [$\frac{1}{2}$ " sq. drive]. |
| No. 3 | | Tension wrench 25-170 lb. ft. (3·5-23·5 kg.m.). [$\frac{1}{2}$ " sq. drive]. |
| RG.6201 | | Small end bush remover/replacer. |
| RG.6513 | | Valve spring compressor. |
| 6312A | | Universal puller (for crankshaft sprocket). |

PRINTED IN ENGLAND
BY
WREN PRINTING CO. LTD.
LONDON.